



HelmsMate Outboard Tiller Extension Handle Instructions

1. Remove from packaging
2. Loosen thumb screws on clamp
3. Slide the HelmsMate over the tiller handle of your outboard or trolling motor then tighten the clamp screw. In most cases the HelmsMate it will fit correctly with the inner rubber sleeve in place. If you have a thicker tiller, remove the inner rubber sleeve. If necessary, physically pull the clamp open wider. The nylon clamp will stretch open but will not break. If you have a thinner tiller handle, please contact Ironwood Pacific for a free second sleeve that will allow you to get a good fit.
4. Make sure you have clear access to the kill switch
5. For adjustable models, adjust to desired length by depressing and disengaging the stainless locking button. slide the handle to the desired length then re-engage the locking button by lining it up with one of the adjustment holes. The handle can be adjusted in 3" increments.

Practice using the HelmsMate to master steering and throttle control on calm water.

Never install or adjust your HelmsMate with the motor running. Always be sure motor is OFF first.

The HelmsMate Outboard Tiller Extension Handle is designed for trolling speeds only