


# MUOVE<sup>™</sup>

## CONVECTION GRILL


Model: MUCMKT120S

### Installation Instructions – Trim kit assembly


Accessory part name and quantity included ( ).

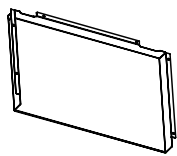

Bottom Duct (1)

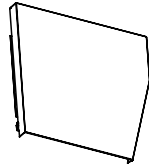

Upper Duct (1)

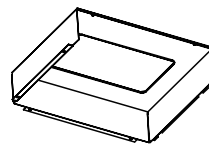

Back Duct (1)



Trim Face B (2)  
Left / Right Sides



Trim Face A (2)  
Top / Bottom



Screw A (4)



Screw B (6)

#### Cabinet recess for built-in installation – (Fig. 1)

The dimensions of the cabinet should be as follows:

A: Width – 22.44" (570mm) Tolerance +/- 1/8"

B: Depth – 19.25" (488mm) minimum

C: Height – 15.14" (384.4mm) Tolerance +/- 1/12"

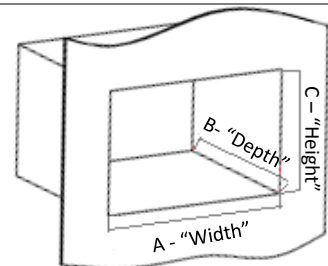


Fig. 1

#### Step 1. Trim Face Assembly – (Fig. 2)

Remove the Trim Face assembly from the box .

Assure the Trim Face parts "A" and "B" are assembled as shown, with flat sides all on one side and screws are secure.

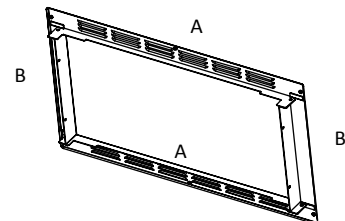


Fig. 2

#### Step 2. Check the Duct Assembly – (Fig. 3)

Remove the Microwave Oven from the box .

Check to see the upper duct, bottom duct and back duct are assembled as shown and the screws attaching are secure.

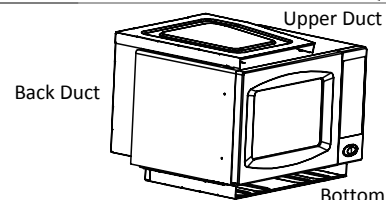


Fig. 3

#### Step 3. Trim Face Installation – (Fig. 4)

Fit the assembled Trim Face Assembly to the front side of the Microwave Oven with the flat / finished side facing front. Attach the Trim Kit Assembly to the pre-drilled holes in each side of microwave oven with Screw "A" (quantity 4) at the 4 side points indicated.

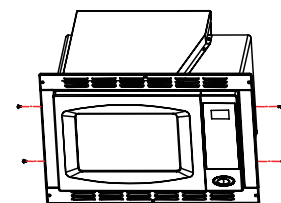


Fig. 4

#### Step 4. Microwave oven installation to cabinet – (Fig. 5)

Carefully slide the Microwave Oven with the attached Trim Face Assembly into the prepared cabinet.

Secure the Microwave Oven with Trim Assembly to the cabinet with Screw "B" (quantity 6) using the pre-drilled points indicated in Fig. 5.

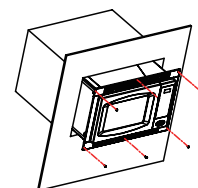


Fig. 5