
NMEA2000® 16 CHANNEL SWITCH INPUT MODULE Part Numbers: 4410 **USER MANUAL** 





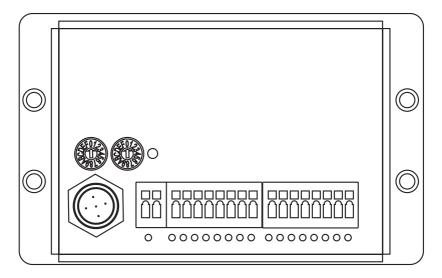

# **Revision History**

Revision	1.0
Description	Original Document

1 Introduction	.2
1.1 Firmware Revision	.2
1.2 Product Features	2
2 Installation	3
2.1 Unpacking the box	. 3
2.2 Mounting the unit	. 3
2.3 Connecting the NMEA2000 Cable	. 3
2.4 Connecting the Power and Switch Input Cables to	
the WAGO socket	.4
2.5 Power and Switch Input Connections	. 4
3 Configuration	5
3.1 NMEA Device Instance	.5
3.2 NMEA PGNs and Unit Information	5
4 Technical Support	.6
5 Warranty	. 7

# 1

# INTRODUCTION

The Oceanic Systems' 4410 16 Channel Switch Input Module monitors switch closure devices and reports their status over the NMEA2000® network.

These devices can include fire/smoke/carbon monoxide detectors, bilge and flood float detectors, doorway and porthole closure detectors, valve status detectors and many more. With this module and suitable NMEA2000® displays the status of all these items can be viewed anywhere on the vessel.

The unit has PLC quality inputs that are manufactured to IEC 61131 and IEC61000 standards so they are optically isolated and fully protected against ESD, Voltage Surges and Transients to ensure the most reliable operation at all times.

It is compatible with either 12 or 24 Volt systems and requires NO user setup menus but the simple setting of two small rotary address switches so multiple Switch Input Modules can exist on the same network.

The connections to the unit are made via boat builder preferred WAGO Cage Clamp terminal blocks which allow either solid or multistranded wires from 0.08 to 1.5mm<sup>2</sup> to be connected quickly and securely. Each switch input also has a tell tale green LED to indicate when it is active.

The 4410 can be either panel mounted or din rail mounted using the mounting clips provided. This unit is designed to operate in a protected marine environment such as an engine room. It is very important that it is installed and set up correctly according to this manual. Please read and follow the installation and setup instructions carefully to achieve the best results.

### 1.1 FIRMWARE REVISION

The information in this manual corresponds to firmware revision 1.00

### **1.2 PRODUCT FEATURES**

The 4410, NMEA2000® 16 Channel Switch Input Module has the following features:

- 16 opto isolated input channels
- PLC quality inputs compatible with standard IEC61131-2 Type 1 and Type 3 Inputs
- Protected against ESD, Voltage Surges and Transients to IEC61000-4-2,4 and 5
- Indicator LEDs for each active input
- Switch settable Device Instance
- Boat Builder Preferred WAGO Cage Clamp Terminals
- Compatible with 12 or 24 Volt Systems
- Panel or DIN rail mounting option

# **INSTALLATION**


### 2.1 UNPACKING THE BOX

You should find the following items in the shipping box:

- 1 x 4410 16 Channel Switch Input Module
- 1 x Din Rail mounting Kit with 2 rail mounts and 4 countersunk M3 screws for rails
- 1 x 4410 User Manual (This document)

### 2.2 MOUNTING THE UNIT

The unit can either be mounted to a flat surface using 4 mounting screws. The unit dimensions and mounting hole locations are shown on the following drawing.

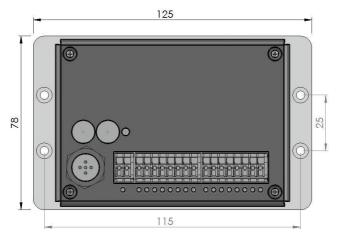


Or the unit can be Din Rails mounted by attaching the Din Rail mounts to the case using the supplied M3 CSK screws and then clipping the unit to the Din Rail

### 2.3 CONNECTING THE NMEA2000 CABLE

The unit is connected to the NMEA2000® network by the 5 way micro C socket on the front. Carefully attach the network drop cable to this plug and hand tighten until it it is fully seated. Take care to match the orientation of the pip inside the socket to the recess inside the drop cable plug. The other end of the drop cable should be connected to a suitable Tee connector on the NMEA2000 network backbone cable.

### 2.4 CONNECTING THE SENSOR CABLES TO THE WAGO SOCKET

The cables from the vessels power-source and the switch inputs are connected using the WAGO Cage Clamp terminal block. The wire should be stripped for 8mm and then the cage clamp opened with a small screwdriver in the slot above the wire connection. Then simply insert the wire into it's connection slot and release the cage clamp by removing the small screw driver. This will produce a secure gas tight connection on wire sizes from 0.08 - 1.5 mm<sup>2</sup>

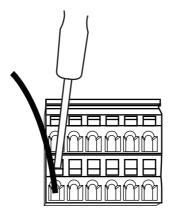

### 2.5 POWER AND SWITCH INPUT CONNECTIONS

The terminal connections are arranged from left to right as follows:

Terminal 1 + 2	Vessel's 12 or 24 Volt Power Supply		
Terminal 3 - 10	Inputs 0 through 7		
Terminal 11 - 18	Inputs 8 through 15		

These are all clearly marked marked on the unit case.

Please note the unit HAS to be connected to the vessels DC system using terminals 1 and 2. These connections are reverse polarity protected and when the connection is correct and power is applied the green LED by terminals 1 and 2 will illuminate.

The individual inputs are positive active. That is to say the unit recognises a plus 12 or 24 Volt signal to indicate an active switch input which will illuminate the green LED next to that input.

If you require an input to be negative triggered then you simply need to connect the input terminal to the ships supply through an 820 Ohm resistor as well as the input wire. Then the input will be permanently on until the input wire signal is grounded which will turn the input off.

We have available Part Number 4411 which is our 8 channel Negative Input Adaptor which provides a group of eight resistors to allow for multiple negative inputs on a 4410 16 Channel Switch Input Module. If more than 8 negative inputs are required on a 4410 then you will need 2  $\times$  4411.

# **CONFIGURATION**

### 3.1 NMEA DEVICE INSTANCE

Each 4410 NMEA2000® 16 Channel Switch Input Module connected to the NMEA2000® network needs to have a unique Device Instance Address. The Device Instance of each unit is set by turning the two small rotary switches with a small screw driver. Valid Device Instances range from "00" through to "FD".

### 3.2 NMEA PGNS AND UNIT INFORMATION

# NMEA2000® Parameter Group Numbers (PGNs)

Туре	PGN No	PGN Name	
Data PGNs	PGN127501	Switch Bank Status Sent on change plus every 2.5 seconds	
Protocol	PGN126464	Tx/Rx PGN List	
	PGN126996	Product Information	
	PGN059392	ISO Acknowledge	
	PGN059904	ISO Request	
	PGN060928	ISO Address Claim	
	PGN126208	Command/Request Group	

### Certifications

Parameter	Comment	
NMEA2000	Level B	
Maritime Nav and RadioComm Equipment	IEC60945	
CE and FCC	Electromagnetic Compatibility	

## Electrical and Mechanical

Parameter	Value	Comment
Operating Voltage	9 to 32 Volts	DC Voltage
Power Consumption	36mA	At 12 Volts
Load Equivalence Number	1	LEN
Reverse Battery Protection	Yes	Indefinately
Load Dump Protection	Yes	SAE J1113
Size	mm	125 x 78 x 38 mm
Weight	gr	180



# **TECHNICAL SUPPORT**

If you require technical support for any Oceanic Systems products you can reach us using any of the following:-

Tel: +44(0)1425 610022
Fax: +44(0)1425 614794
Email: support@osukl.com
Web: www.osukl.com
Post: Oceanic Systems Ltd

Unit 10-11 Milton Business Centre

Wick Drive, New Milton, Hampshire BH25 6RH

Oceanic Systems (UK) Ltd Unit 10-11 Milton Business Centre, Wick Drive, New Milton, Hampshire, BH25 6RH, United Kingdom

Tel: +44(0)1425 610022 Fax: +44(0)1425 614794 Email: sales@osukl.com Web: www.osukl.com

Copyright © 2016 Oceanic Systems (UK) Ltd. All rights reserved. Our policy is one of continuous product improvement so product specifications are subject to change without notice. Oceanic Systems products are designed to be accurate and reliable. However, they should be used only as aids to vessel monitoring, and not as a replacement for traditional navigation and vessel monitoring techniques. NMEA2000® is a registered trademark of the National Marine Electronics Association.

Oceanic Systems warrants this product to be free from defects in materials and workmanship for one year from the date of original purchase. If within the applicable period any such products shall be proved to Oceanic Systems satisfaction to fail to meet the above-limited warranty, such products shall be repaired or replaced at Oceanic Systems option. Purchaser's exclusive remedy and Oceanic Systems sole obligation hereunder, provided product is returned pursuant to the return requirements below, shall be limited to the repair or replacement, at Oceanic Systems option, of any product not meeting the above limited warranty and which is returned to Oceanic Systems; or if Oceanic Systems is unable to deliver a replacement that is free from defects in materials or workmanship, Purchaser's payment for such product will be refunded. Oceanic Systems assumes no liability whatsoever for expenses of removing any defective product or part, or for installing the repaired product or part or a replacement therefore or for any loss or damage to equipment in connection with which Oceanic Systems products or parts shall be used. The foregoing warranties shall not apply with respect to products subjected to negligence, misuse, misapplication, accident, damage by circumstances beyond Oceanic Systems control, to improper installation, operation, maintenance, or storage, or to other than normal use or service.

THE FOREGOING WARRANTIES ARE EXPRESSLY IN LIEU OF AND EXCLUDES ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

Statements made by any person, including representatives of Oceanic Systems, which are inconsistent or in conflict with the terms of this Limited Warranty, shall not be binding upon Oceanic Systems unless reduced to writing and approved by an officer of Oceanic Systems.

IN NO CASE WILL OCEANIC SYSTEMS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, DAMAGES FOR LOSS OF USE, LOSS OF ANTICIPATED PROFITS OR SAVINGS, OR ANY OTHER LOSS INCURRED BECAUSE OF INTERRUPTION OF SERVICE. IN NO EVENT SHALL OCEANIC SYSTEMS AGGREGATE LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT(S) INVOLVED. OCEANIC SYSTEMS SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT OR WARRANTY, TORT (INCLUDING NEGLIGENCE), OR OTHER THEORIES OF LAW WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY OCEANIC SYSTEMS, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.


Oceanic Systems does not warrant that the functions contained in any software programs or products will meet purchaser's requirements or that the operation of the software programs or products will be uninterrupted or error free. Purchaser assumes responsibility for the selection of the software programs or products to achieve the intended results, and for the installation, use and results obtained from said programs or products. No specifications, samples, descriptions, or illustrations provided by Oceanic Systems to Purchaser, whether directly, in trade literature, brochures or other documentation shall be construed as warranties of any kind, and any failure to conform to such specifications, samples, descriptions, or illustrations shall not constitute any breach of Oceanic Systems limited warranty.

### WARRANTY RETURN PROCEDURE

To apply for warranty claims, contact Oceanic Systems or one of its dealers to describe the problem and determine the appropriate course of action. If a return is necessary, place the product in its original packaging together with proof of purchase and send to an Authorized Oceanic Systems Service Location. You are responsible for all shipping and insurance charges. Oceanic Systems will return the replaced or repaired product with all shipping and handling prepaid except for requests requiring expedited shipping (i.e. overnight shipments). Failure to follow this warranty return procedure could result in the product's warranty becoming null and void.

Oceanic Systems reserves the right to modify or replace, at its sole discretion, without prior notification, the warranty listed above.

# NMEA2000® VESSEL MONITORING AND CONTROL SYSTEMS

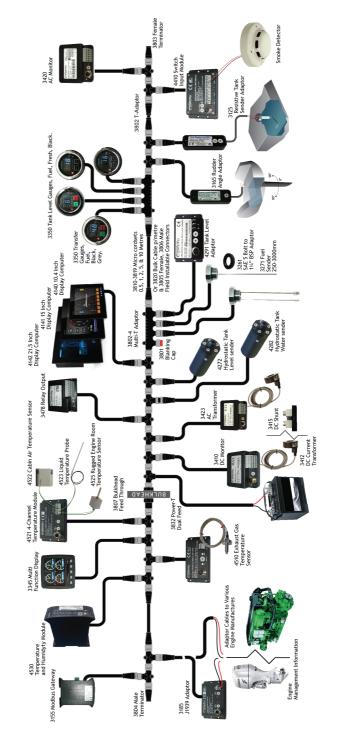

Up to 16 of each type of device can be installed on a single network